


VERTICAL SHEER SHADE


Comfortable Home


TOOLS





Required for installation

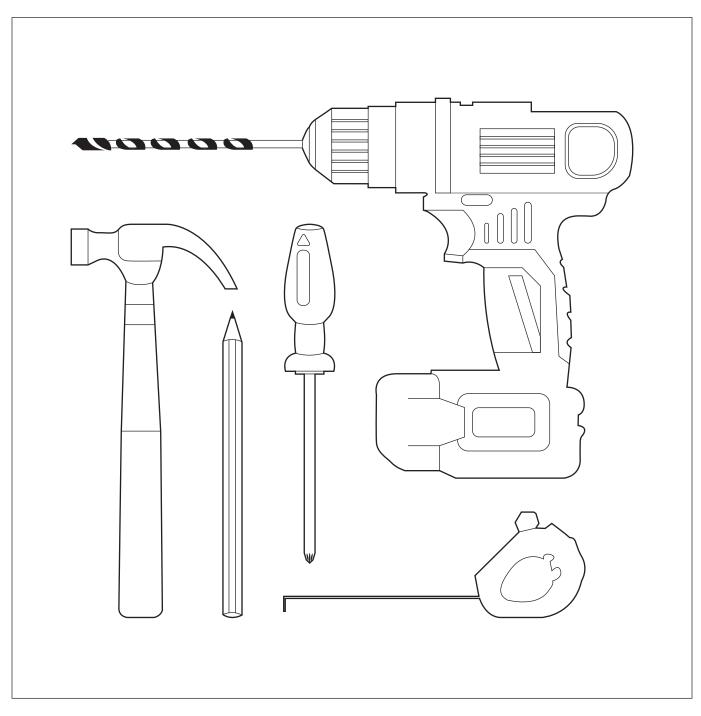


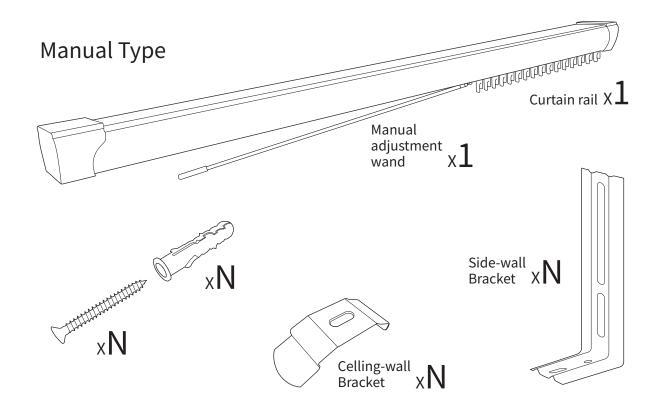

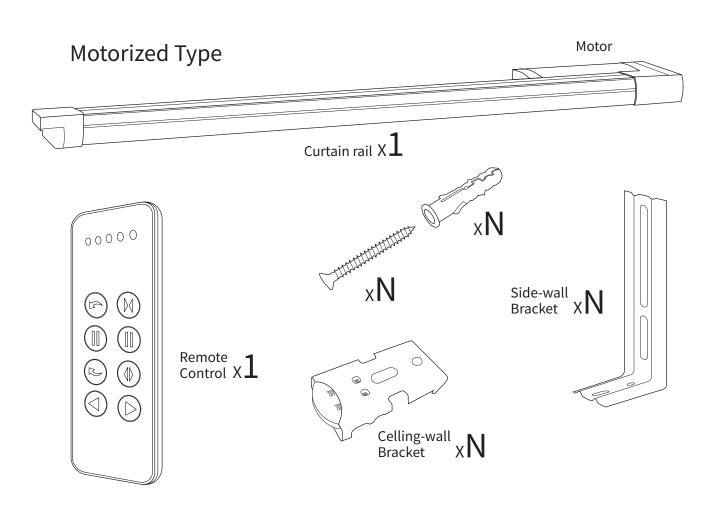


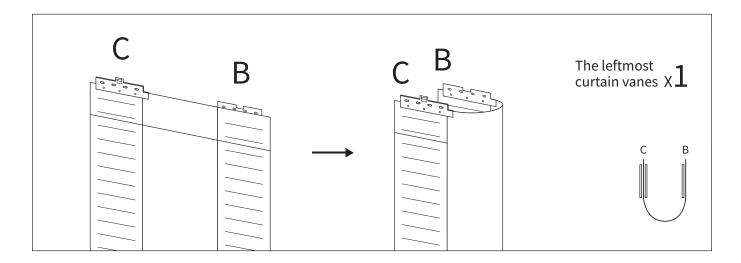

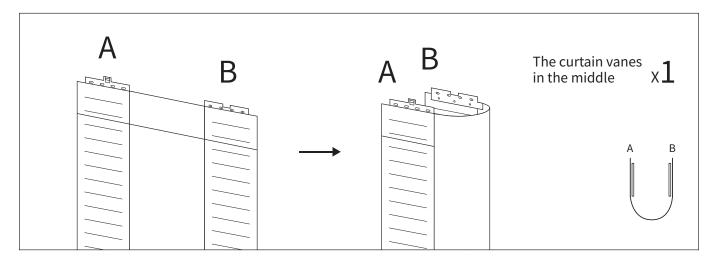

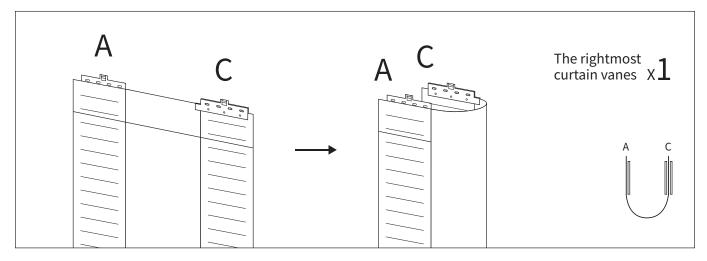



Assembly diagram

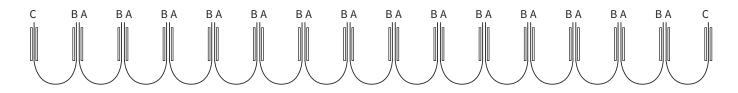 


 
The width and the height of the finished product will be 1cm / 0.4" shorter than order width and height.



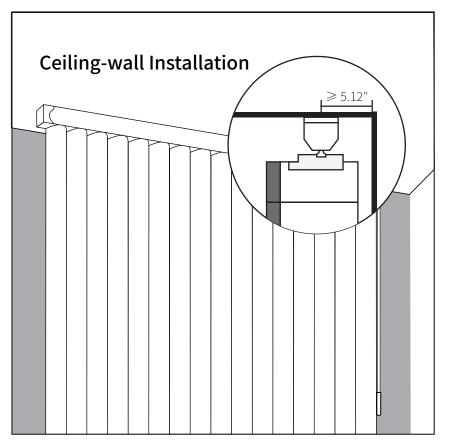


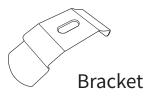

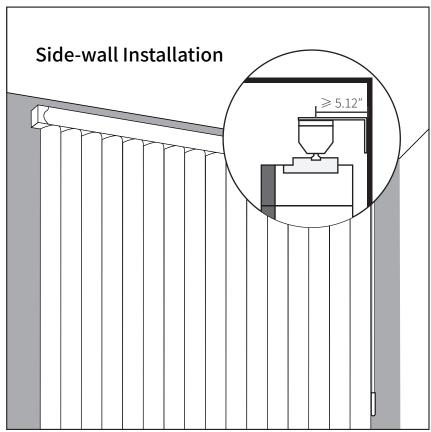


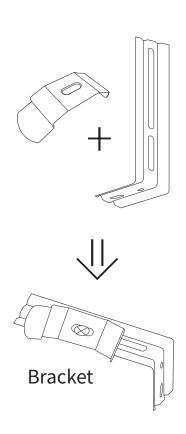


1

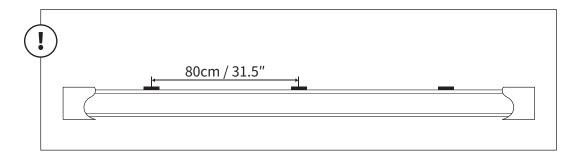

Measure and mark the punching position to ensure that the holes are in the same straight line.

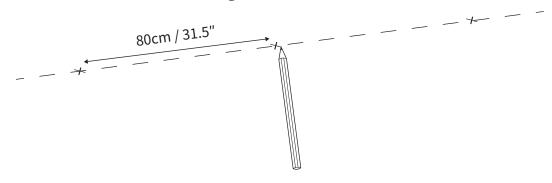


2 Drill holes with an electric drill and place the plastic drywall wall anchors screws. Ordinary screws can be used directly if it is a wooden wall.

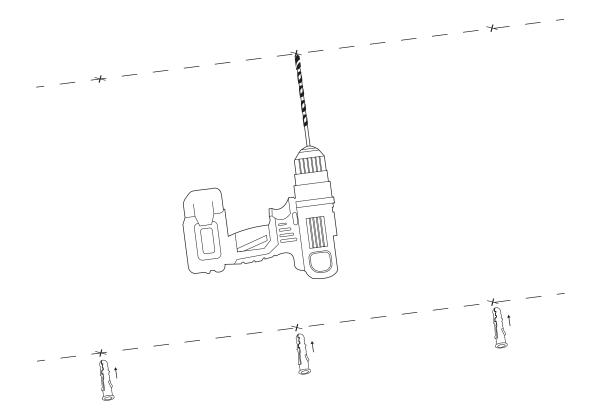


Remove the brackets from the curtain rail and fix them to the marked position with screws.



4 Hang the curtain rail on the brackets and fasten it.

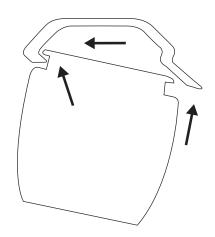



Hang the assembled curtain vanes on the curtain rail (See P3 for curtain vanes assembly method).

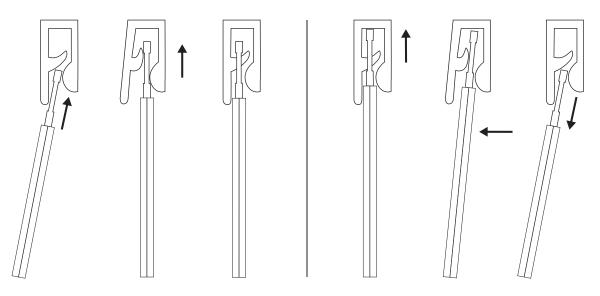

The curtain vanes can be disassembled to clean.

 
The manual type has been installed at this step, the motorized type needs to be connected to the power supply.

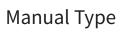


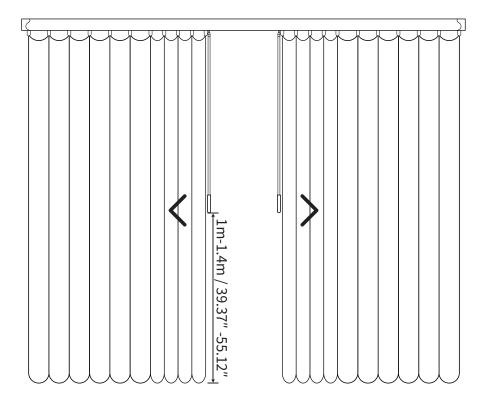

Motorized Type

7 Button Diagram

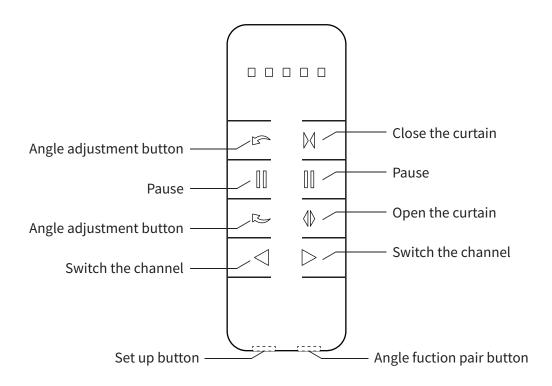

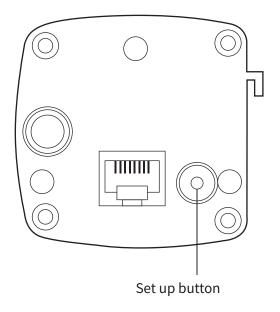

8 Pairing instrutions

1. Pairing the motor with the remote control

Step 1: Press the switch button to choose the channel that you want to set the motor (the remote control has 5 channels for example we set the curtain on channel 1).

Step 2: Long press the set up button on the motor until the motor beeps. (See page 8)

Step 3: Long press the set up button on the remote control until the motor beeps. (See page 8)

2. Let the curtain open and close once.

Step 1: Press the open button on the remote control, let the curtain open and automatic stop.

Step 2: Press the close button on the remote control, let the curtain close and automatic stop.





